 


LinTronic

<http://www.lintronic.dk>


ASTROBEAM X311






Female

You will need a crossed cable with male connectors in both ends

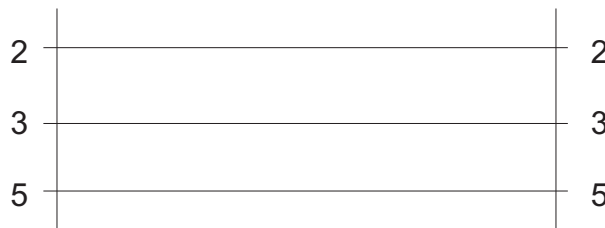


Special notes:

Baudrate/protocol is:
19200 bps, n, 8, 2

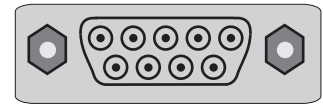

Male

Insert the DB09 male connector into the
TableTop's RS232 connector

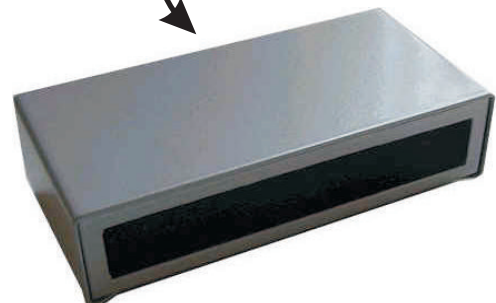

In TT455-RT-238's Memory Map, use commands:
Canon, Projector, RS232 SX80