


# LinTronic

<http://www.lintronic.dk>

## TableTop series

Controlling an Apple by TT455-RT-238

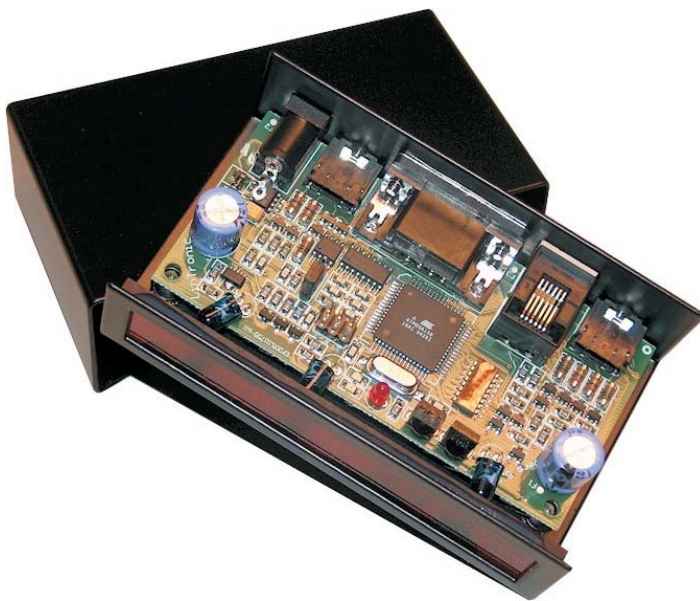

We have found that different Apple remote controls looking alike, actually send out different codes:

**Play code 1**

716238135004051000000003=PLAY

**Play code 2**

716238135004187000000003=PLAY

**Play code 3**

716238135004054000000003=PLAY

You will notice that a small part of the code changes, meaning you cannot use ONE play code to control this function on all Apple devices.

On the next page, you can see how the code is transmitted depending how long you hold the button activated.

If you want to simulate a repeated code, you need to change Parameter 5 from 000 to 001:


716238135004054001000003=PLAY

Then increase the repetition number until the code is transmitted for long enough:

716238135004054001000024=PLAY



Play activated (button activated shortly)

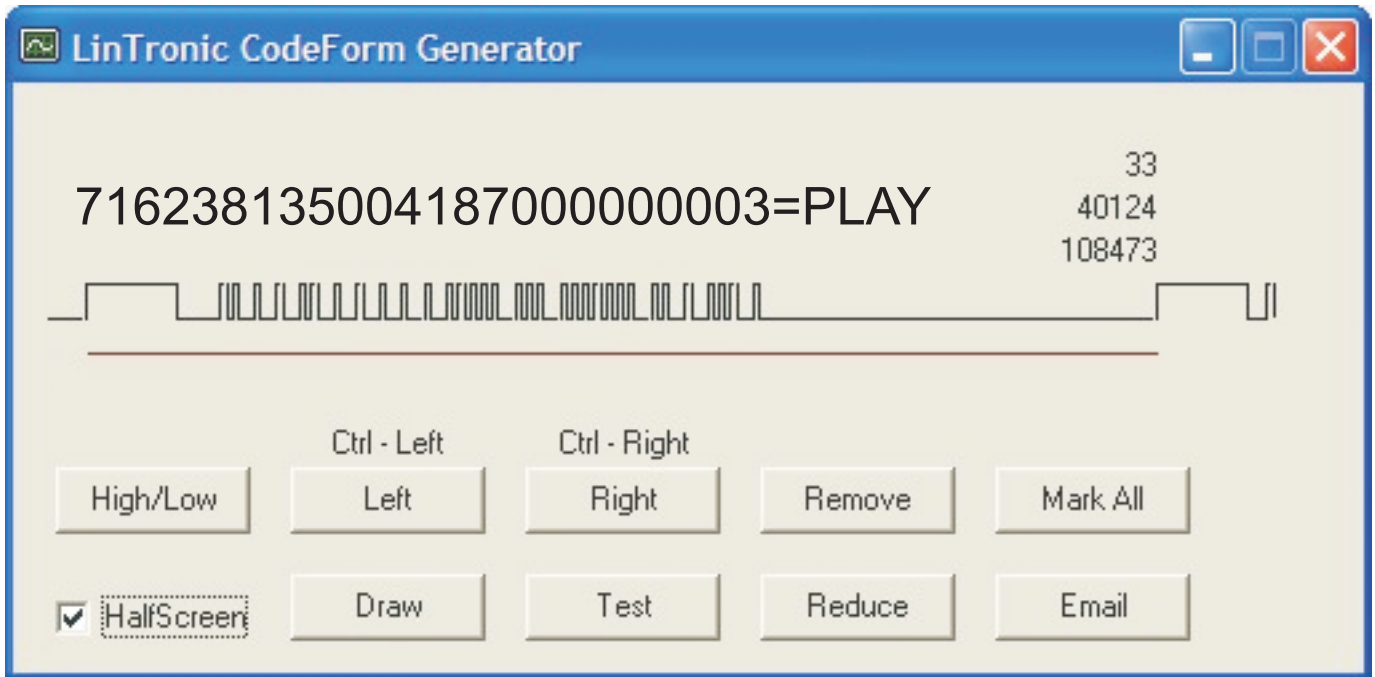

Play repeated (button hold down for 3 seconds)

